



## Hob Markings and Instructions for Use

Whirlpool AKM 330 - Solid plate hob

- 4 Solid plate zones
- Easy grip controls
- One piece easy clean top plate and control panel



### **Hob Settings**

- Turn Off – Hob control pointing straight up
- 1<sup>st</sup> Turn clockwise – setting 6 (highest/hottest) setting)
- 2<sup>nd</sup> Turn Clockwise - setting 5
- 3<sup>rd</sup> Turn Clockwise – setting 4
- 4<sup>th</sup> Turn Clockwise – setting 3
- 5<sup>th</sup> Turn Clockwise – setting 2
- 6<sup>th</sup> Turn Clockwise – setting 1 (lowest/coolest setting,)
- Final Turn – knob pointing straight up – Off

### **Extractor fans**

- Choose extractor fan setting 1, 2, or 3
- Slide the drawer towards you to open, light will turn on, extractor fan will start.
- Reverse to turn off