

## Make – Ignis



Left - Temperature Dial – goes up in 50's

1. 50
2. 100
3. 150
4. 200
5. 250

Right – Functions

1. Light bulb
2. Oven
3. Fan oven
4. Grill

## Make – Apelson



Left - Temperature Dial – goes up in 25's

1. 50
2. 75
3. 100
4. 125
5. 150
6. 175
7. 200
8. 225
9. 250

Middle – Functions Dial

1. Light
2. Oven
3. Fan oven
4. Grill
5. Grill fan

Right – Timer Dial

## Make – Zanussi



Left – Temperature – goes up in 50

1. 50
2. 100
3. 150
4. 200
5. 250

Middle – Functions Dial

1. Fan oven
2. Grill
3. light bulb

Right – Timer – 5, 10, 15 minutes

## **Make - Whirlpool**



Left – Functions

1. Light bulb
2. Grill
3. Fan oven
4. Oven

Middle – Timer Dial

Right – Temperature Dial – goes up in 50's

1. 50
2. 100
3. 150
4. 200
5. 250